



[] - Indicative Wardrobe Position US - Utility Store WD - Washer/Dryer C - Cupboard R - Riser Cupboard SR - Shower Room